

INSTRUCTIONS TO SET UP DIGITAL MOUTH KIOSK

-Unpack:

2 Cartons: Digital Signage Screen & Kiosk Stand.

Open stand carton, unwrap, and place stand back facing up on wrapping.

- Prepare Stand:

Unscrew Screen Support Panel.

- Check Accessories:

Screen Panel Support: 6 Screws, Washers.

TV Mount: Allen Key, 4 Thin Screws.

Feet Kit: 2 Silver Angle Connectors, 8 Screws, Washers, Allen Key.

Extras: 4 Anti-Scratch Pads, Magnetic Remote Holder, Cable Management Attachments.



Base Assembly



-Insert Long part of the Feet Base Angle and attach screws **loosely**.
-Repeat on the other side



-Place Base Plate into position over the angle. - The reason why screws are loose is to allow base to maneuver in to position.



-Align the top screws and attach loosely.
-Repeat on the other side.
-Now tighten all screws.

Digital Signage Screen Assembly

Place Screen:

- Take screen out of carton.
- Place **face down** in stand, aligning with the gap provided.
- Ensure **power cable socket is at the top**.

		
<p>-Place Screen into back with power supply on the top. -Screen needs to be placed in at a side angle to go in the back</p>	<p>-Align the Screen Support Panel with 4 holes in the TV -Loosely Screw in all 4 screws</p>	<p>-Move Screen into position to enable securing the Screen Support Panel to the steel stand -This can be done with the help of protruding metal holder. -First loosely attach all 6 screws. -Then Tighten all screws</p>

- Place the Anti Scratch Pads to all 4 corners
- Lift up screen from the top
- Attach Power supply and place cable and use cable management to neaten the stand
- Cable will go into back of the stand and out the base
- Attach the magnetic remote holder to the back of the unit
- Power Up

FINALLY PAIR THE SCREEN TO SIGNAGE APP

-REFER SCREEN PAIRING INSTRUCTIONS